




FLOAT SWITCH INSTRUCTIONS



The installation must be done only by properly trained personnel


The installer should check that the product is electrically suitable for the equipment being controlled. Where the switch is supplied with a yellow-green wire for earthing, the remaining two wires are supplied as normally open for high level closure.

The two remaining wires can be supplied as normally open for low level closure to specific order. For the standard model without an earth wire it is the responsibility of the installer to ensure the product is used in compliance with local regulations.

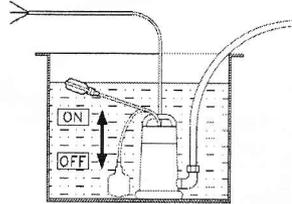

EXAMPLE OF USUAL

Installation Instructions

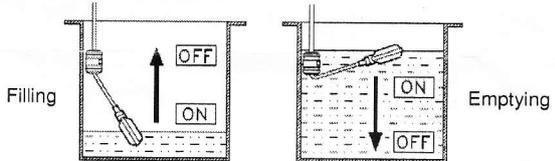

Electrical Connections

Filling

Use wires "Black" and "Blue"

Wired in this manner the regulator

- Closes when down (Pump ON)
- Opens when up (Pump OFF)

Emptying

Use wires "Black" and "Brown"

Wired in this manner the regulator

- Closes when up (Pump ON)
- Opens when down (Pump OFF)

The wire that is not used has to be correctly isolated

Counterweight Installation

The counterweight is supplied only on request

